

## simalube quick instruction guide to installation, removal, and disposal


Define installation type, lubricant, lubricator size, dispensing time, and accessories



**Direct Installation**



**Indirect Installation**

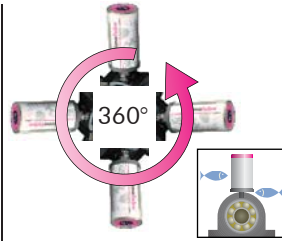

simalube lubricators can be installed in all positions, even underwater.



Use "Calculation Pro" to choose correct lubricant, dispensing time, and lubricator size.

("Calculation Pro" is available at [www.simatec.com](http://www.simatec.com), in the App Store, and in the Android Market.)



### Prepare lubrication point



Clean lubrication point



Remove connector nipple



Screw in reducing nipple  
(if necessary, seal lubrication point)



Lubricate the grease lines with a grease gun  
(fill tubes completely)

### Install and activate simalube



Cut off plug



Activate dispensing time with 3 mm Allen key



Write in activation date



screw in lubricator



regularly check simalube

### Dispose of simalube correctly



Either refill or dispose of empty lubricators



a) Remove cover disk



b) Remove gas generator with a socket wrench (SW21 mm)



Dispose of intact gas generator in battery recycling and empty housing in plastic recycling.

(Warning: dispose of leftover grease separately)